

DFR

Differential Adjustment

FR control (Flow & Idle Pressure) -
 CW to increase delta p
 CCW to decrease delta p

System Pressure Adjustment

DR control (Max Pressure) -
 CW to increase
 CCW to decrease

A10VO

